



3.5L High Pressure Fuel Pump Installation

2011 to 2016 Ford F150 EcoBoost 3.5L

Included in the Kit:



Livernois Motorsports Firestorm High Pressure Fuel Pump

Adapter fittings for OEM soft line use:

- (1) Female to male
- (1) 90° female to female
- (1) Male to male

Wiring jumper harness

(2) 6mm x 45mm bolts to connect pump to base


(1) 6mm x 35mm bolt (shorter)

Re-use (2) Factory bolts to mount base

***DISCLAIMER**

We highly recommend a certified mechanic performs the work of installing the fuel pump. Great caution should be taken when removing and installing any fuel system components. Fuel is highly flammable. Not performing the correct steps can cause fire or serious injury.

Stock Pump

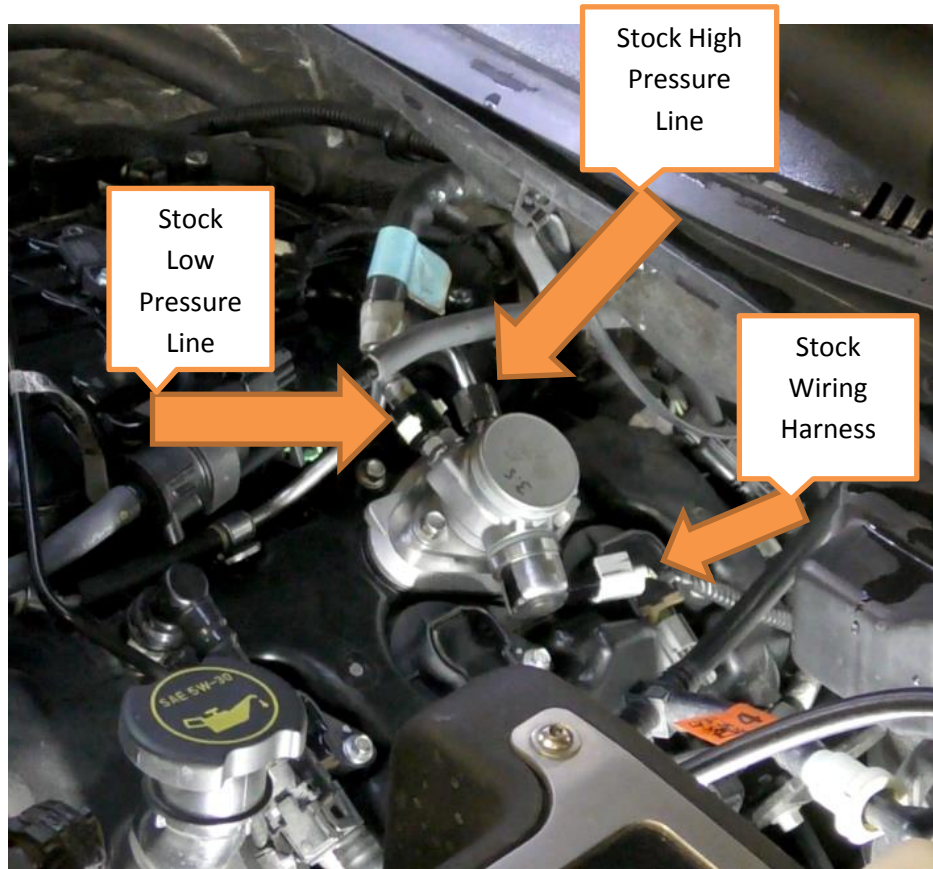

- 1) Disconnect vehicle battery
- 2) Remove factory engine cover and fuel pump sound dampener
- 3) Use fuel disconnect tool to remove the factory low pressure line from the factory pump
- 4) Remove the factory high pressure line from the factory fuel pump
- 5) Disconnect factory wiring harness
- 6) Remove fuel pump and base
- 7) Install new Firestorm High Pressure Fuel Pump with provided hardware
- 8) Slightly bend and align high pressure fuel line to new fuel pump
- 9) Re-Install low pressure line with supplied adapter fittings
- 10) Install supplied wiring harness adapter
- 11) Reconnect battery
- 12) The factory engine cover will not fit with new Firestorm High Pressure Fuel Pump. Modify at your own risk.
- 13) Install calibration if purchased separately
- 14) Start vehicle and check for leaks
- 15) Enjoy!

*DISCLAIMER

We highly recommend a certified mechanic performs the work of installing the fuel pump. Great caution should be taken when removing and installing any fuel system components. Fuel is highly flammable. Not performing the correct steps can cause fire or serious injury.

Completed Install of Livernois Motorsports High Pressure Fuel Pump

